# IMPORTANT SAFETY

## Precautions

**Warning** - To reduce the risk of personal injury when using your appliance, always exercise basic safety precautions, including the following:

1. Read all instructions before using the appliance.
2. Use this appliance only for its intended purpose as described in this user manual.
3. Do not use any accessories not recommended by the manufacturer.
4. Never operate this unit if the cord or plug is damaged, if it is not working properly, or if it has been damaged or dropped into water. Return the unit to a service center for replacement.
5. Do not repair or replace any part of the appliance or attempt any servicing. **Note**: If for any reason this product requires service, we strongly recommend that you contact a certified technician.
6. Replace immediately any worn power cords, loose plugs and power outlets.
7. Do not use this appliance for commercial uses.
8. This appliance must be connected to a proper electrical outlet with the correct electrical supply.
9. To reduce the risk of electric shock or fire, do not use extension cords or adapters to connect the unit to an electrical power source.
10. Never unplug your appliance by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
11. Never touch the electrical outlet with wet hands.
12. Close supervision is necessary when this product is used by or near children.
13. Store the unit out of reach of children.
14. Keep the unit away from direct sunlight and heated surfaces. Place on a dry, flat surface.
15. Do not use while bathing.
16. Do not place this unit where it can easily fall or be dropped into water or other liquids.
17. Never reach for a product that has fallen into water. Unplug the unit immediately.
18. Never leave the unit unattended when plugged in. Always unplug the unit when not in use.

## Proper Usage

**CAUTION**

- Turn on the unit unless the tank is filled with water.
- Never fill the tank or clean the unit with harsh solvents, cleaners or abrasives.
- Never immerse the unit completely into water. **The unit is not waterproof!**
- Unplug the unit before filling with water. Do not exceed the “Max” mark on the stainless steel tank.
- If the unit is not working properly, shut it off. Call an authorized service representative for repair.
- Loosely inlaid stones or unfastened parts may become dislodged during cleaning.

  **Note**: This cleaner is not appropriate for soft delicate stones (e.g., opals and pearls), or materials such as shells, leather, cloth and wood.
- Do not use this jewelry cleaner for watches that are not water resistant.

# Digital Ultrasonic Jewelry Cleaner

**Features and Benefits**

- Cleans Jewelry, Watches, Glasses & More
- Quick & Easy to Use
- Uses Tap Water
- Adjustable Cleaning Time
- Large 20.3 oz. Capacity
- 42,000 Ultrasonic Waves per Second

The Haier Ultrasonic Jewelry Cleaner restores luster and shine to jewelry, watches, glasses and more. Microscopic bubbles created by energy waves loosen surface dirt and dust particles for a thorough cleaning that effectively and efficiently restores items to their original brilliance. Use the Ultrasonic Jewelry Cleaner to clean jewelry, pins, watches, glasses, dentures, razor heads, antique coins, keys and key chains.

User Manual Model # HU380S

Please read instructions carefully before operating this unit.
Save these instructions for future reference.

Haier

Quality ▪ Innovation ▪ Style

# SAVE THESE INSTRUCTIONS

## For Future Use

Thank you for purchasing our Haier product. This easy-to-use manual will guide you in getting the best use of your jewelry cleaner.
Remember to record the date of purchase.

Model number

Date of purchase

Staple your receipt to your manual. You will need it to obtain warranty service.

# 1 ULTRASONIC JEWELRY CLEANER & ACCESSORIES

## Parts and Accesories

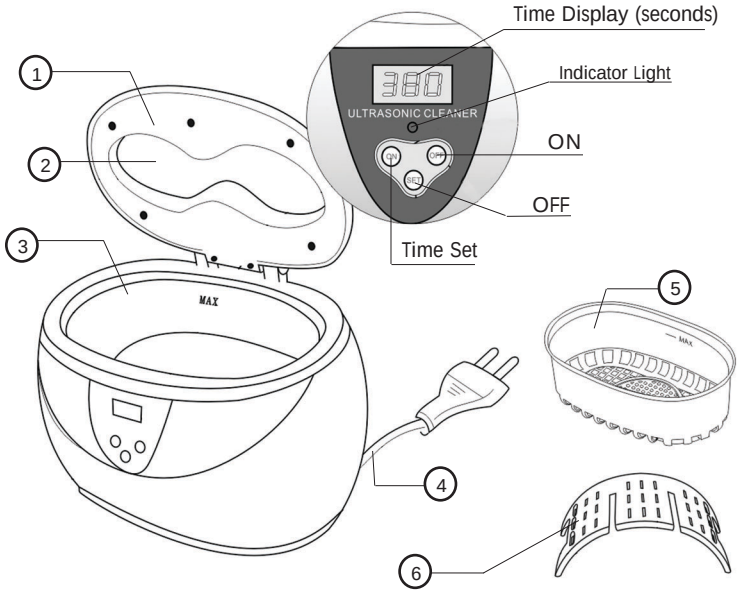


1. Cover
2. Viewing Window
3. Stainless Steel Tank
4. Power Plug and Cord
5. Basket
6. Watch Stand

Check to make sure that all parts and accessories are present and in good condition. If you find that they are not in good condition or are missing, please contact our customer service department for assistance. Our Toll-Free number is 1-877-337-3639.

# 2 BASIC OPERATING

## Instructions

1. Open the cover and fill the stainless steel tank with water to the "Max" mark.
2. Place small items to be cleaned into the basket provided. Place the basket into the water. Large items should be placed directly into the tank to maximize ultrasonic energy.

   **Note**: When cleaning watches with metal wristbands, slip the watch onto the watch stand provided. Place the watch stand into the tank.

3. Close the cover and plug in the unit.
4. Press the "SET" button to choose the desired cleaning cycle. Choose between the following time settings: 180, 280, 380, 480, and 90 seconds.
5. Press the "ON" button to begin cleaning. The red indicator light will turn on and the time remaining in the cleaning cycle will be displayed on the screen.

   **Note**: During cleaning, you may hear hissing noises from the unit. This normal occurrence indicates that cleaning is in progress.

6. When the time display shows 000, the unit will shut off automatically and the red light will turn off. To interrupt a cleaning cycle, press the "OFF" button. Press the "ON" button to continue.
7. When the cleaning cycle is completed, unplug the unit, open the lid, remove the basket or watch stand and pour the water from the stainless steel tank. Wipe the unit dry.
8. Repeat the above steps if necessary.

**Note**: For enhanced cleaning, add 2 drops of detergent.

# 3 MAINTENANCE INSTRUCTIONS

## Cleaning

1. Always unplug the unit immediately after use.
2. Empty the tank after each use.
3. Wipe the tank with a dry towel. Always keep the unit clean.

   **Note**: Do not immerse the unit in water or rinse under running water as this may damage the unit.

4. Store the unit in a cool, dry location.
5. Repairs should be made only by an authorized service representative.

## Product Information

**SPECIFICATIONS**

| | | | |
|---|---|---|---|
| Description | Digital Ultrasonic Jewelry Cleaner | Voltage | AC 100-120 V, 50/60 Hz |
| Model | HU380S | Power | 35 W |
| Exterior Dimensions (WxDxH) | 8.27" x 5.51" x 5.91" | Timer Setting | 5 Cycles (seconds): 180, 280, 380, 480, 90 |
| Tank Capacity | 20.29 oz. | Net Weight | 2.23 lbs. |

# 4 LIMITED WARRANTY

This item is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original date of purchase under normal household use. Within the warranty period, we will replace the product.

This warranty extends only to the original retail purchaser, and excludes any damage to the product resulting from accident or misuse. The product is not warranted when used in a commercial or business environment.

The above warranty is complete and exclusive. The warrantor expressly disclaims liability for any special, incidental, indirect, or consequential damages in connection with the purchase or use of this product or costs over the original purchase price. Any implied warranties arising by operation of law shall be limited in duration to the terms of this warranty.

This warranty gives you specific legal rights and you may have other rights, which vary by jurisdiction.

**IMPORTANT!** Do not return this product to your retailer.

If for any reason this product malfunctions, please follow the directions below and return the product to the manufacturer to receive a replacement product of equal or greater value.

- Remove the foot pedal.
- Remove the label from the bottom of the unit.
- Return both items to the closest return center with a check for $9.99 to cover shipping and handling. Please be sure to include your return address. Allow 10-15 working days for shipment.

Haier Return Center
475 Commercial Avenue
Palisades Park, NJ 07650

Haier Return Center
525 South Lemon Avenue
Walnut, CA 91789